

>>



NOTE: In Valet Mode, the Remote starter is not functional. Keyless entry, Lock and Unlock will remain functional. See RF kit user manual for alternate valet mode programming.

01



Time restriction. Complete next step within 7 seconds.

02



Cycle ignition ON five times [5x OFF/ON] rapidly. Parking Light will flash once [1x].

03



Wait, Parking Light will flash twice [2x], pause for 1.5 second, then will flash once [1x] to indicate that the valet mode is ON or twice [2x] to indicate that the valet mode is OFF.

04



Turn ignition to OFF position.

05



Valet Mode Programming Procedure completed.

>>



To exit valet mode: repeat steps 1 to 4 then START vehicle for 15 seconds.