

REMOTE START / ALARM DIAGNOSTICS

REMOTE STARTER DIAGNOSTICS

Parking Light flashes (before starting) :

3x	Ready mode disabled
4x	Valet mode activated (The LED is on)
5x	Hood open

Parking Light flashes (after Shutdown) :

1x	Normal stop (Brake, Park Brake)
3x	Runtime expired or shut down by transmitter
4x	No tachometer signal
5x	Hood open
6x	Over crank threshold (8 seconds)

ALARM DIAGNOSTICS

Parking Light flashes (after disarm)

3x	Door open – zone 3
4x	Shock sensor – zone 4
5x	Hood open – zone 5
6x	Trunk open – zone 6
7x	Auxilliary IN – zone 7
8x	Tilt Sensor – zone 8