

DISARM / ENTER / EXIT VALET MODE						
			STEP 1	STEP 2		
to disarm the system		System armed : DEL flash	 IGN	OR		Within 10 seconds press and release the Valet switch or the antenna button 3 TIMES.
				3x	3x	
to enter and exit valet mode		System disarmed : LED is OFF	Insert the key and turn it to the ignition (ON/RUN) position.			 System disarmed : LED is OFF
						 System disarmed and in valet mode : LED is ON.

