Remote Programming Procedure

IDATASTART REMOTE PROGRAMMING PROCEDURE

This procedure applies to iDatastart RF only.
NOTE: The HC must be flashed for the correct RF brand in Weblink prior to programming remotes.

01

WARNING: Complete the module programming procedure and tach programming procedure before programming the remotes. A maximum of four [4x] remotes per system.

02

Set ignition to ON position.

03 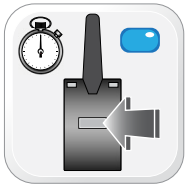

Press and release the antenna button, then press and hold the antenna button. The antenna's leds will turn solid BLUE.

04

Parking Light will flash once [1x].

05

Press once [1x] on the LOCK button of each remote.

06

The antenna's leds will flash BLUE once [1x] for each successful pairing.

07 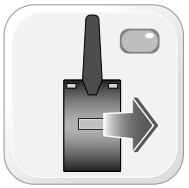

Release the antenna button. The antenna's leds will turn OFF.

08

Set ignition to OFF position.

09

Remote Programming Procedure completed.

>>

To program an additional remote as second vehicle mode: Follow steps 1 to 4. Press twice [2x] on the "F" button then press once [1x] on the LOCK button of the remote. Follow steps 6 to 9.

>>

Please visit www.idataguides.com to see all of our remote user manuals

---

U.S. Patent No. 8,856,780 CA 2759622
Automotive Data Solutions Inc. © 2023

Remote Programming Procedure

ALTERNATE REMOTE PROGRAMMING PROCEDURE 1

Use this sequence to program non iDatastart remotes to the HC. NOTE: The HC must be flashed for the correct RF brand in Weblink prior to programming remotes.

ALTERNATE REMOTE PROGRAMMING PROCEDURE 2
PTS (Push to Start) application

STEP 1: Set the vehicle to the ignition or "ON" position

STEP 2: Within 5 seconds push to the "OFF" position

STEP 3: Within 5 seconds set the vehicle to the ignition or "ON" position (do not start)

STEP 4: Step on the foot brake 3 times within 5 seconds. The parking lights will flash 1 time to indicate remote programming is enabled

STEP 5: Tap (a quick 0.5 second press and release) the lock button on the remote. The parking lights will flash 1 time indicating remote code has been accepted

STEP 7: After 5 seconds of no valid remote codes being transmitted the HC will automatically exit programming mode

>>

WARNING: Program aftermarket remotes before usage. A maximum of four [4x] aftermarket remotes per system.

01

Time restriction. Complete next step within 7 seconds.

02

Cycle ignition ON five times [5x OFF/ON] rapidly.

03

Parking Light will flash once [1x].

04

Time restriction. Complete next step within 5 seconds from previous step.

05

Press once [1x] on LOCK button of aftermarket remote.

06

Parking Light will flash once [1x].

>>

To program additional remotes: repeat steps 4 to 6 using each additional remote.

07

Wait, Parking Light will flash twice [2x].

08

Turn ignition to OFF position.

09

Aftermarket Remote Programming Procedure completed.

U.S. Patent No. 8,856,780 CA 2759622
Automotive Data Solutions Inc. © 2023